

# Installation Instructions

 
 
## TerraLUX TLE-110S

To use the **TerraLUX TLE-110S**, you must first remove the halogen bulb/reflector unit from the **Streamlight® SL20X®** rechargeable flashlight. **To Remove the halogen bulb and reflector:** Unscrew the very front of the head of the flashlight. This contains the front lens & gasket, and the reflector/halogen bulb combination unit. Pull out the unit, leaving the front lens and gasket in place. Pull off the wires connected to the halogen bulb/reflector unit.

**Examine the Streamlight® SL20X® Unit:** Inside the flashlight head, notice the screw terminal with two wires. This terminal needs to be rotated (see Figure 1) so that it can be folded down into the flashlight cavity.

**To install the TerraLUX TLE-110S:** Slide the connectors onto each of the pins on the bottom of the TerraLUX TLE-110S. Turn on the flashlight. If the unit does not light, reverse the wires. The unit should now light. Shut off the flashlight. Orient the 110S unit so that the circled area of Figure 2 is over the screw terminal. The terminal must be positioned inside the recessed area. Carefully push the TerraLUX TLE-110S into the head of the flashlight, making sure the wires are away from the edge of the heat sink. Observe that the top of the reflector bracket is approximately level to the top edge of the flashlight head. Screw the head of the flashlight back on.

**You are now done! Make sure the unit is fully charged.**

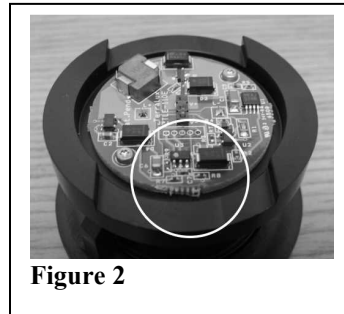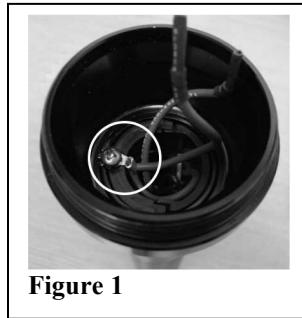

**TerraLUX Inc.**

4725 Nautilus Court S, Unit 3, Boulder, CO 80301 Phone 303-442-4960 Fax 303-942-3584 [www.Terraluxcorp.com](http://www.Terraluxcorp.com)