


**Instructions TLE-ST/XT**

The TerraLUX Streamlight Stinger ST/XT LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module towards the screw in the newer Streamlight Stinger flashlights. **In older models with a clear plastic interior, the unit may need to be reversed (points AWAY FROM SCREW).** To install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by properly orienting the arrow Then press down gently to insert the pins into the socket. If you have an older Stinger you may need to rotate the unit a half circle to get the unit to light. Replace the head using the supplied lens **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.


**Runtime:** 2 Hours on fully charged batteries  
**LED Light Output:** 220 Lumens

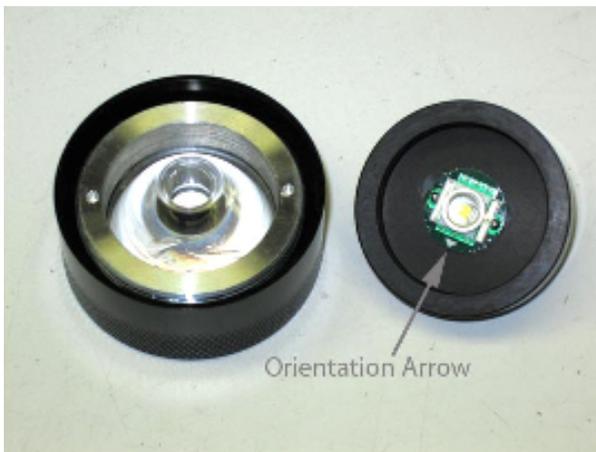

**Instructions TLE-ST/XT**

The TerraLUX Streamlight Stinger ST/XT LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module towards the screw in the newer Streamlight Stinger flashlights. **In older models with a clear plastic interior, the unit may need to be reversed (points AWAY FROM SCREW).** To install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by properly orienting the arrow Then press down gently to insert the pins into the socket. If you have an older Stinger you may need to rotate the unit a half circle to get the unit to light. Replace the head using the supplied lens **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.

**Runtime:** 2 Hours on fully charged batteries  
**LED Light Output:** 220 Lumens

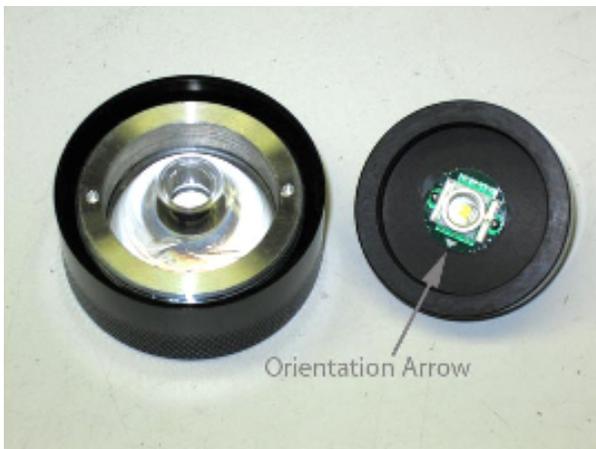

**Instructions TLE-ST/XT**

The TerraLUX Streamlight Stinger ST/XT LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module towards the screw in the newer Streamlight Stinger flashlights. **In older models with a clear plastic interior, the unit may need to be reversed (points AWAY FROM SCREW).** To install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by properly orienting the arrow Then press down gently to insert the pins into the socket. If you have an older Stinger you may need to rotate the unit a half circle to get the unit to light. Replace the head using the supplied lens **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.

**Runtime:** 2 Hours on fully charged batteries  
**LED Light Output:** 220 Lumens